

*istruzione di montaggio anta*  
*door setup instruction*  
*instruction montage porte*  
*instrucciones de montaje hoja*

**ABSOLUTE EVO**




guarda su YouTube  
watch on YouTube




# CONTENUTO KIT | CONTENTS

Dotazione - Standard equipment - Equipement standard - Equipo standard

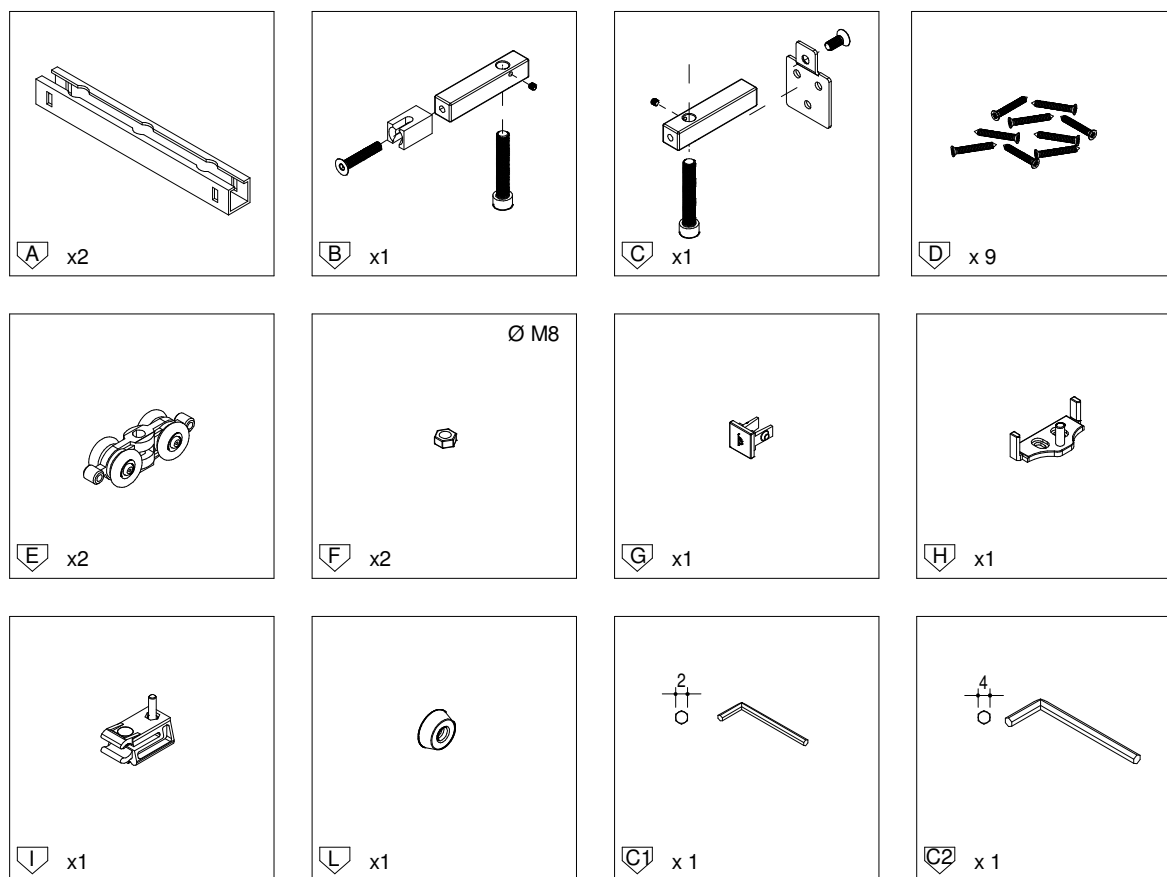


Attrezzatura - Tools - Outils - Herrajes

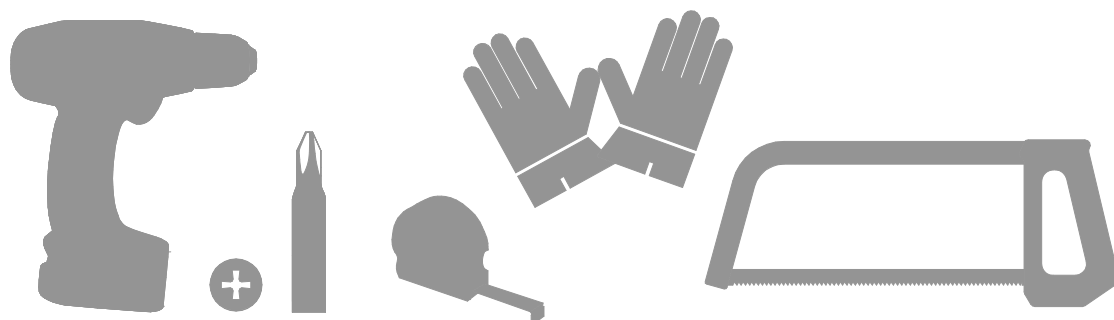

# CONTENUTO KIT | CONTENTS

Panoramica - Overall view - Vue d'ensemble - General

---



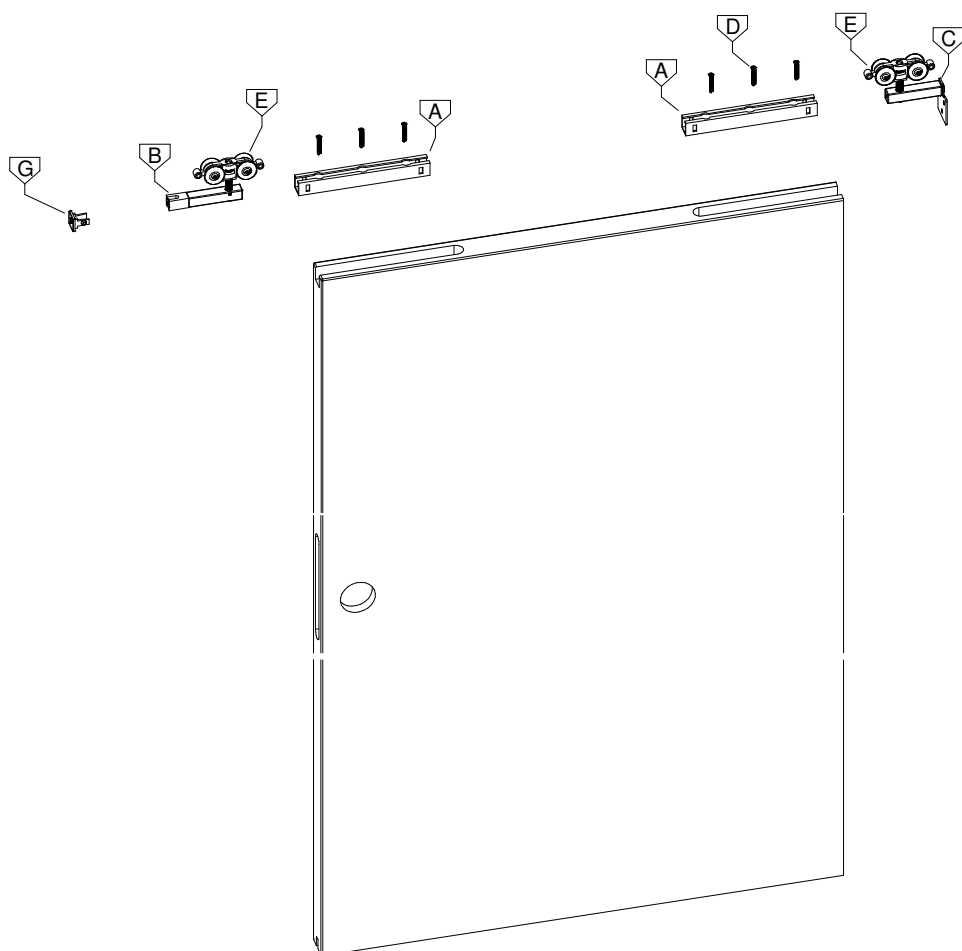


## INDICE - INDEX



---

Installazione guide e spazzolini	3 - 4
Costruzione anta scorrevole	5 - 7
Installazione anta scorrevole	8 - 10

1.1

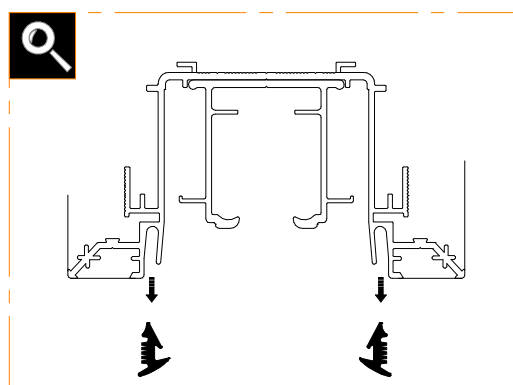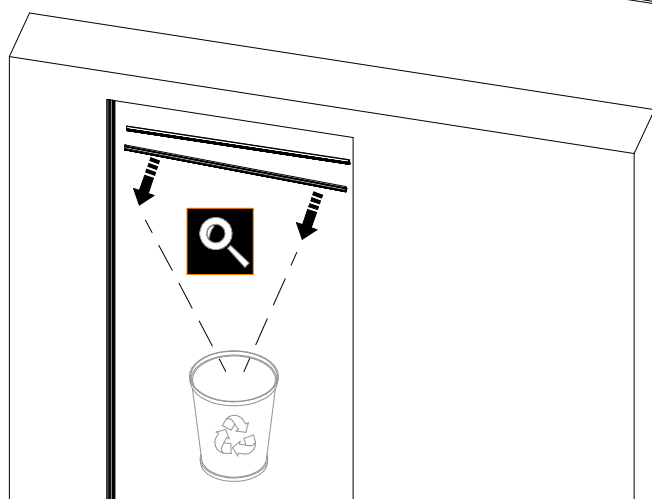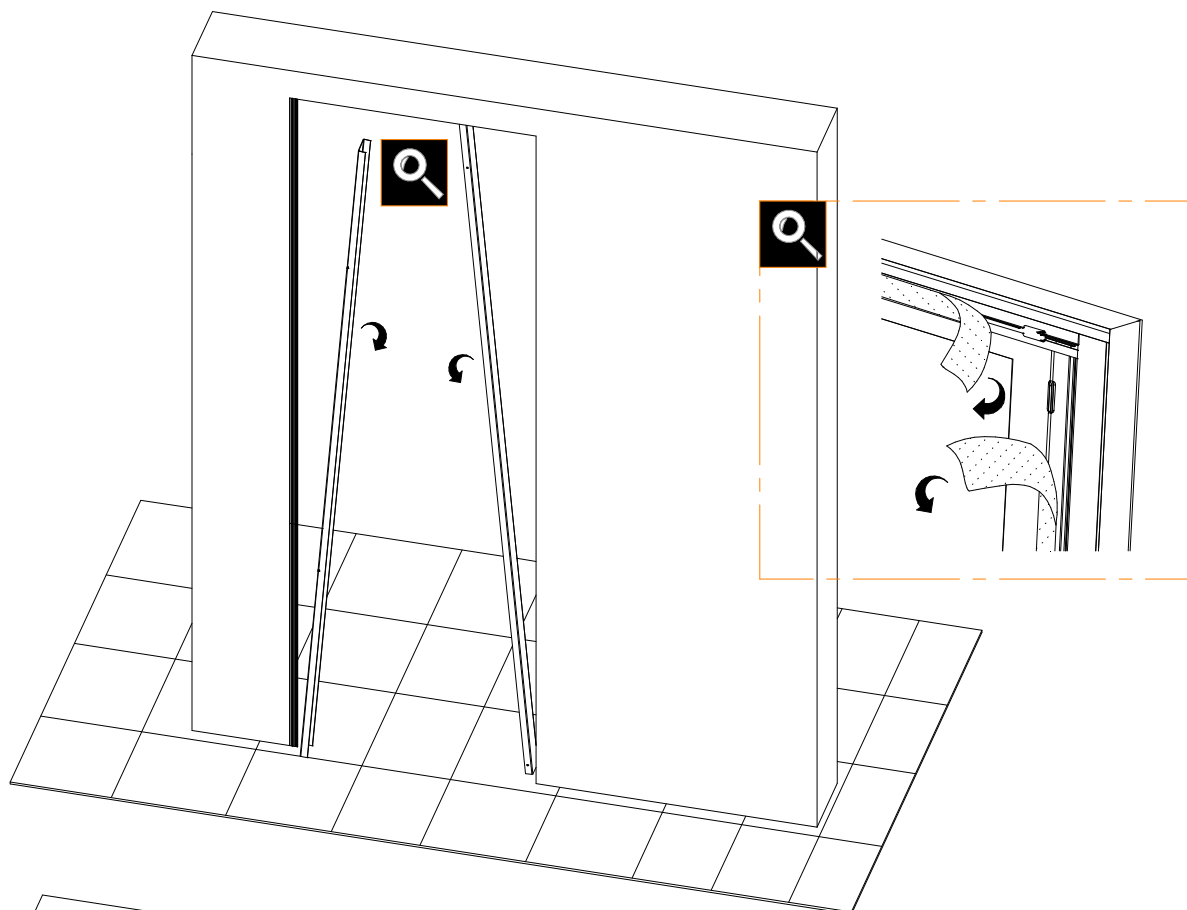


1.2

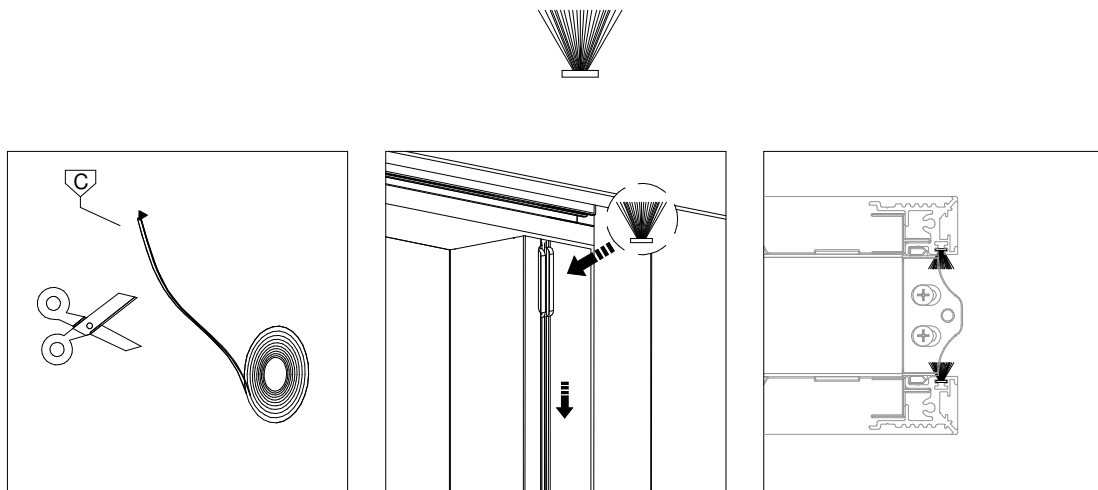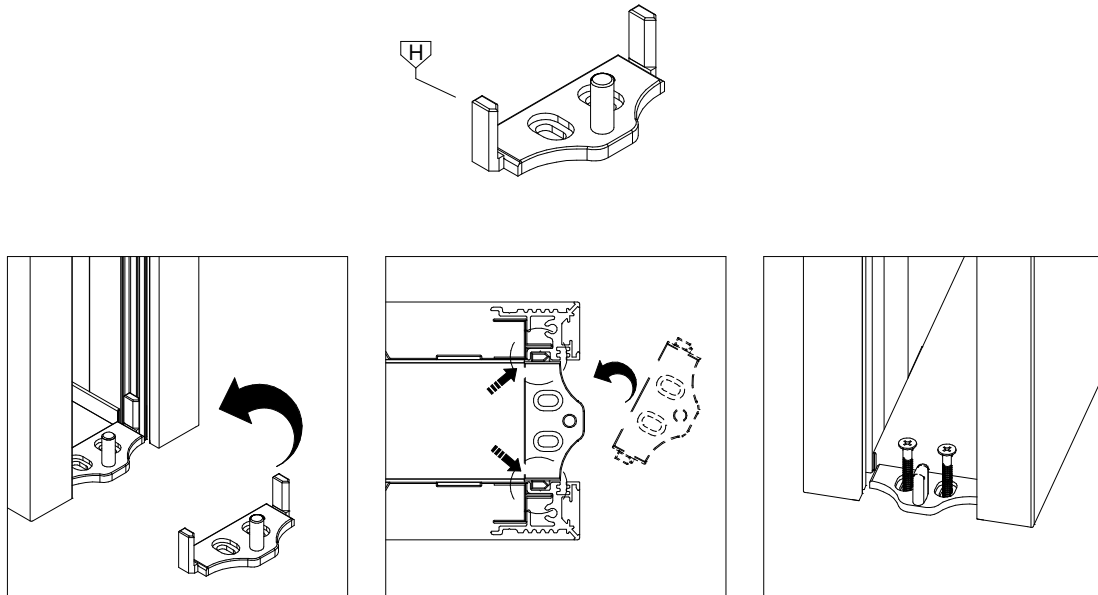


2.1

MOD. ABSOLUTE EVO / ABSOLUTE EVOKIT

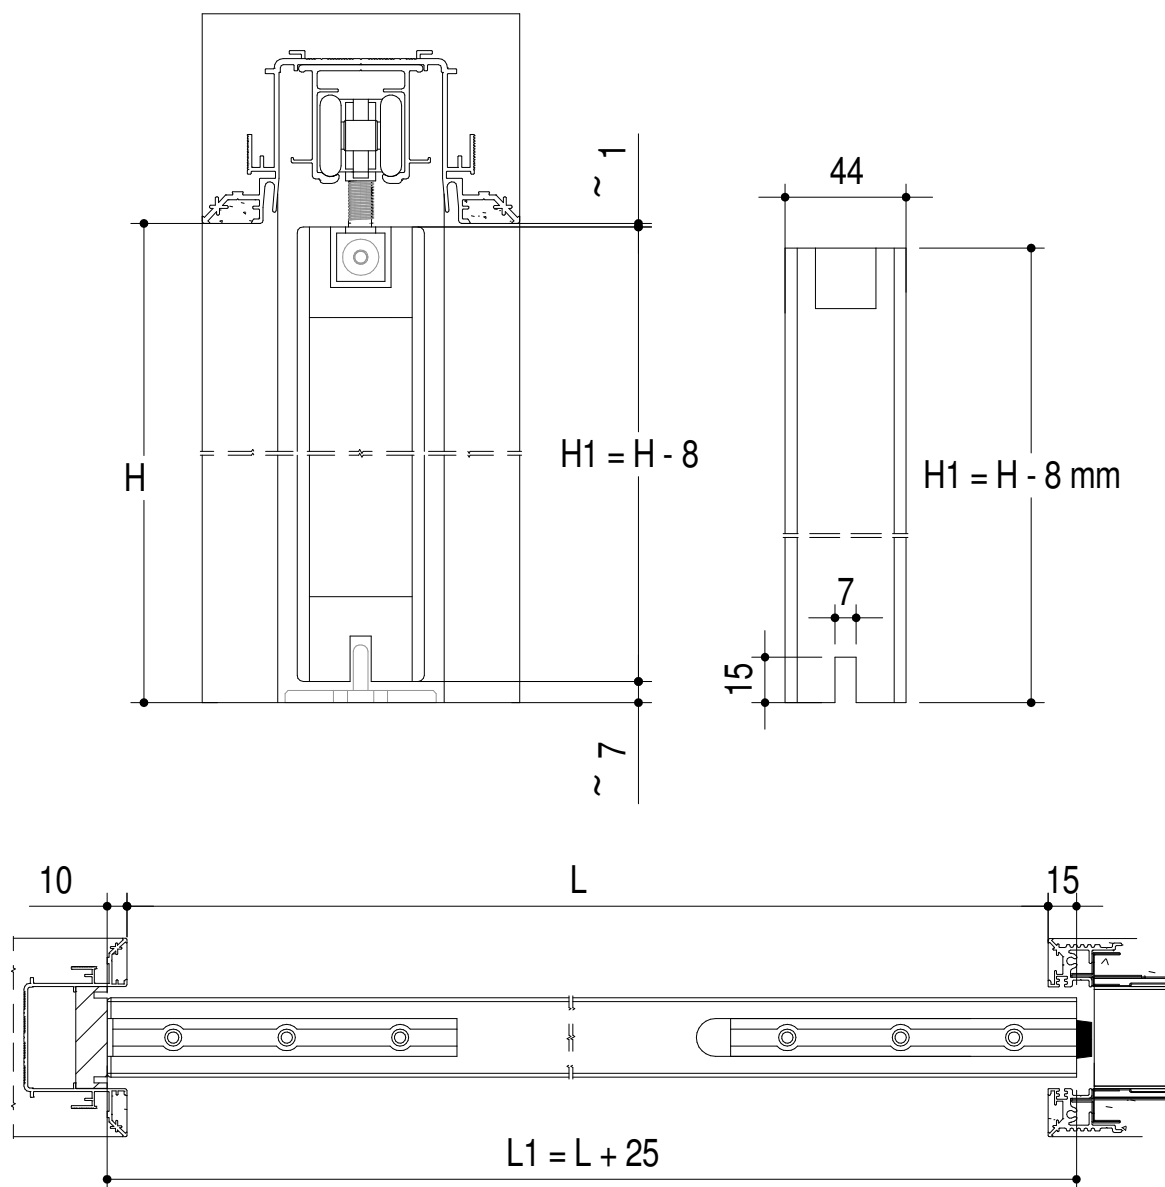


2.2

MOD. ABSOLUTE EVO "TUTTALTEZZA" ( TH )

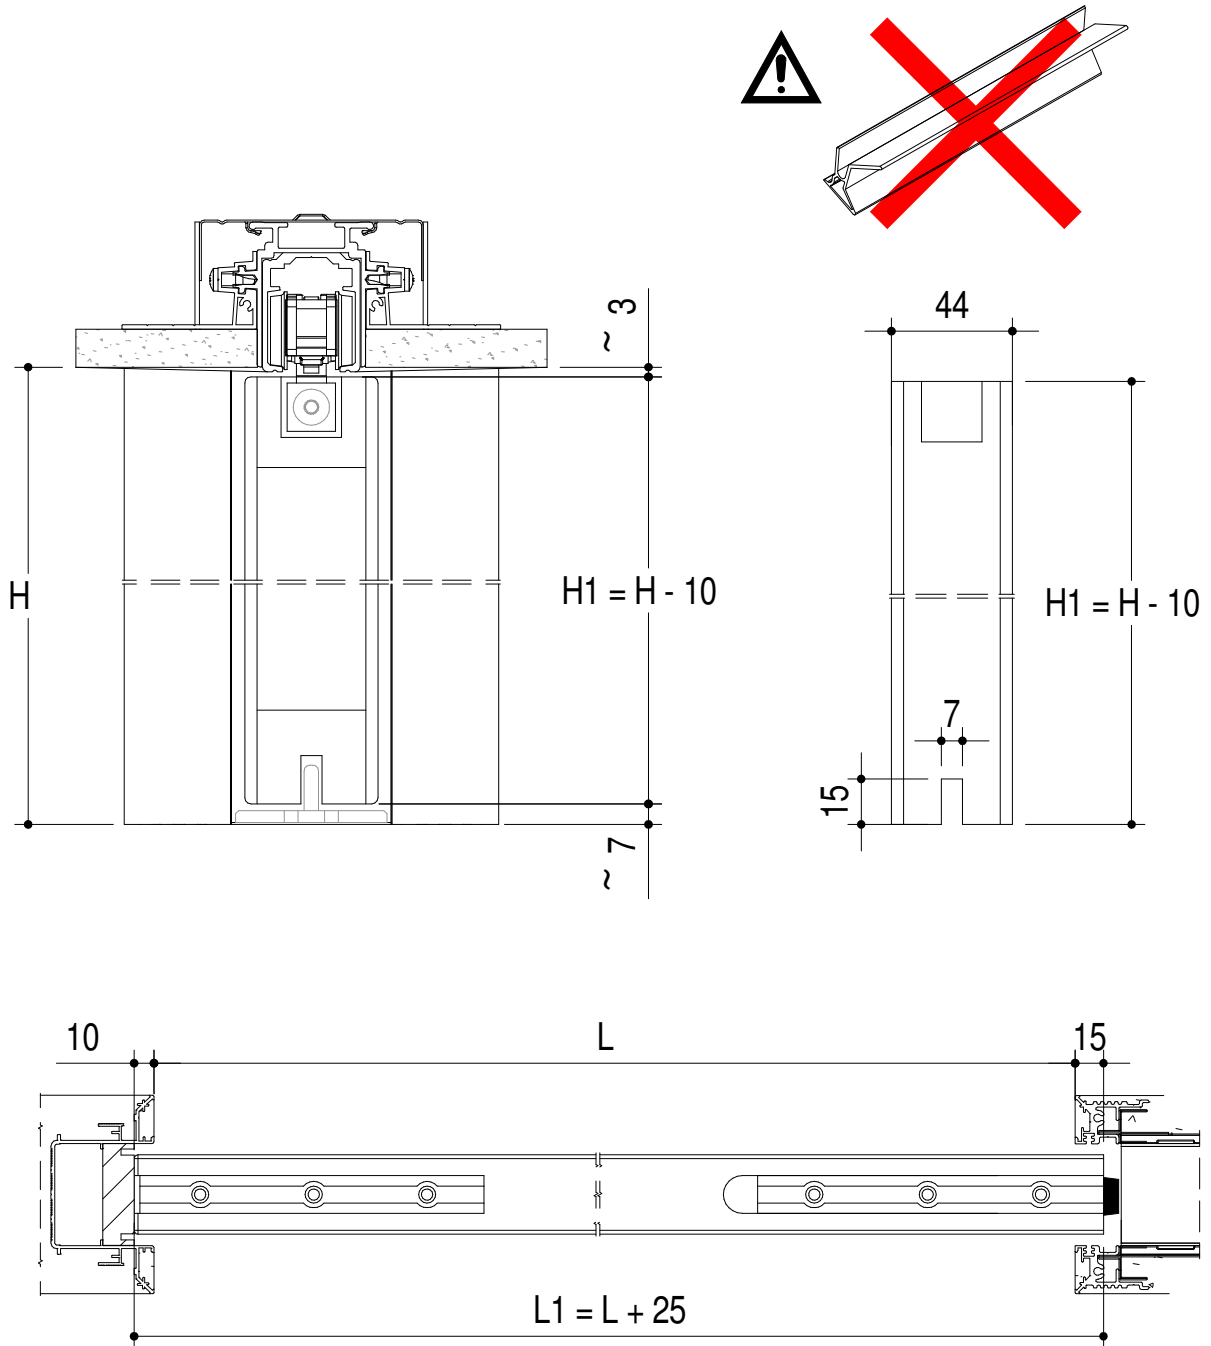


Subject to misprints, errors and technical modifications.  
All dimensions are in mm

2.3

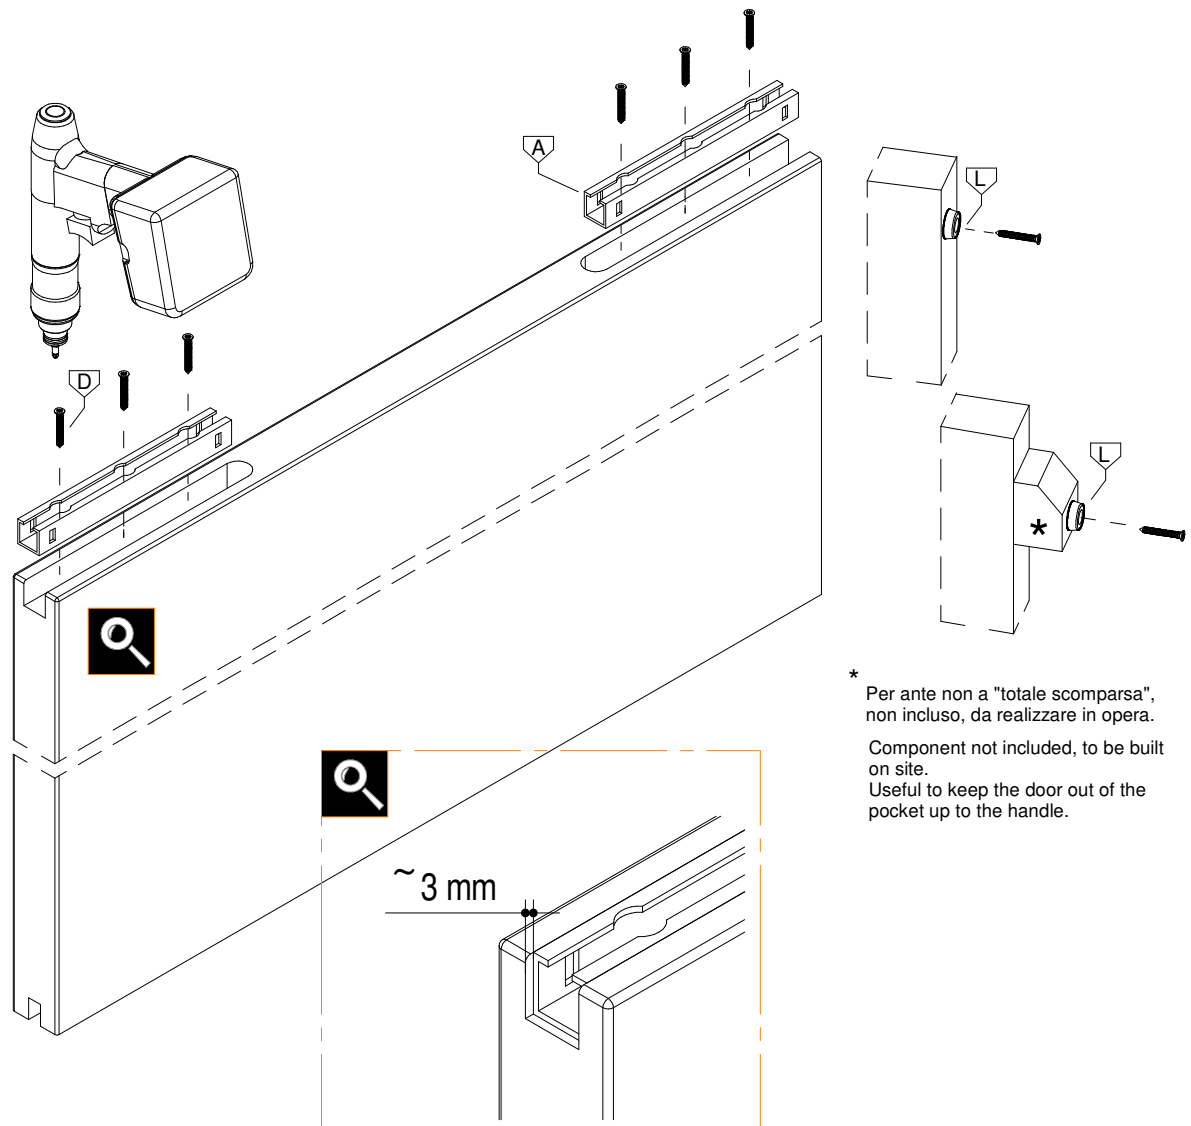


\* Per ante non a "totale scomparsa", non incluso, da realizzare in opera.  
 Component not included, to be built on site.  
 Useful to keep the door out of the pocket up to the handle.

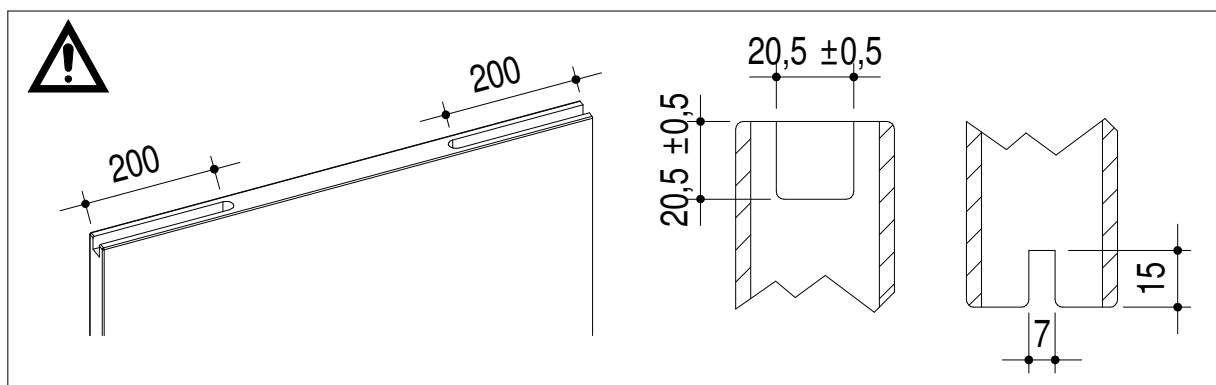





3.1

**C + E**

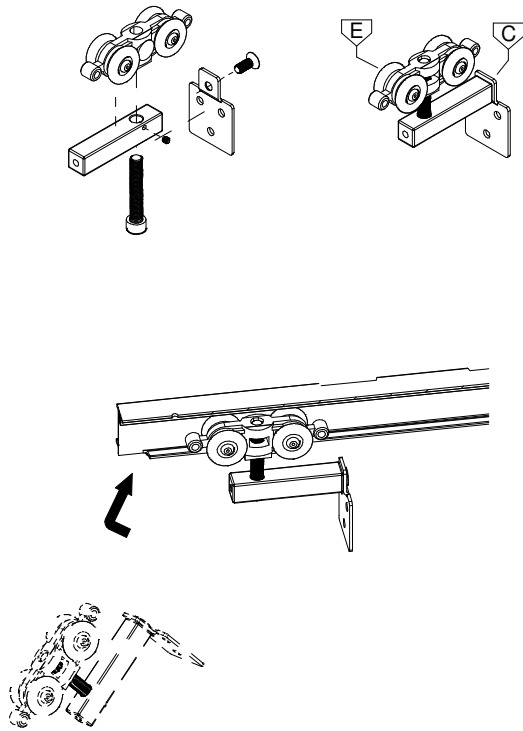


**B + E**




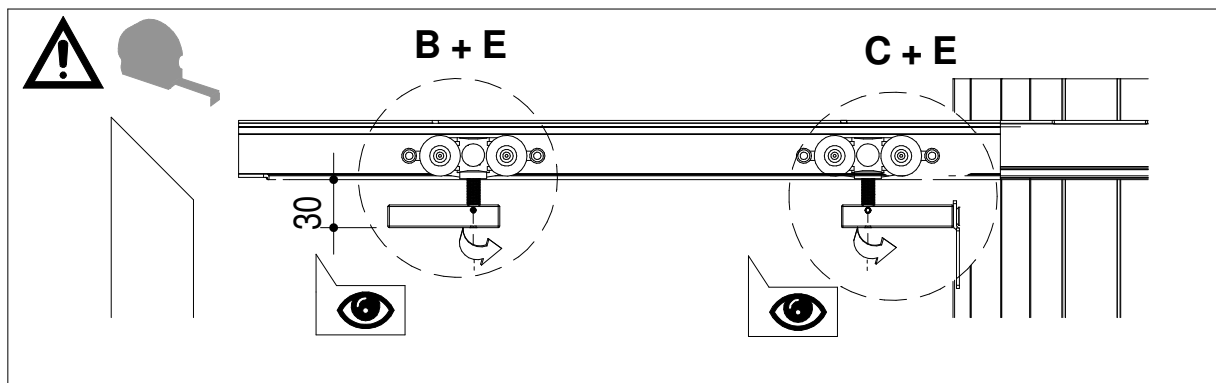
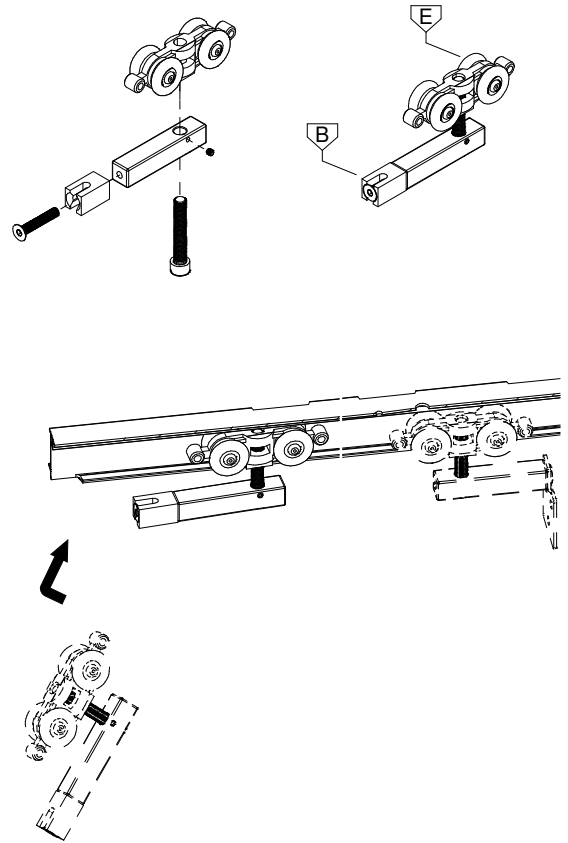


Subject to misprints, errors and technical modifications.  
All dimensions are in mm

3.2

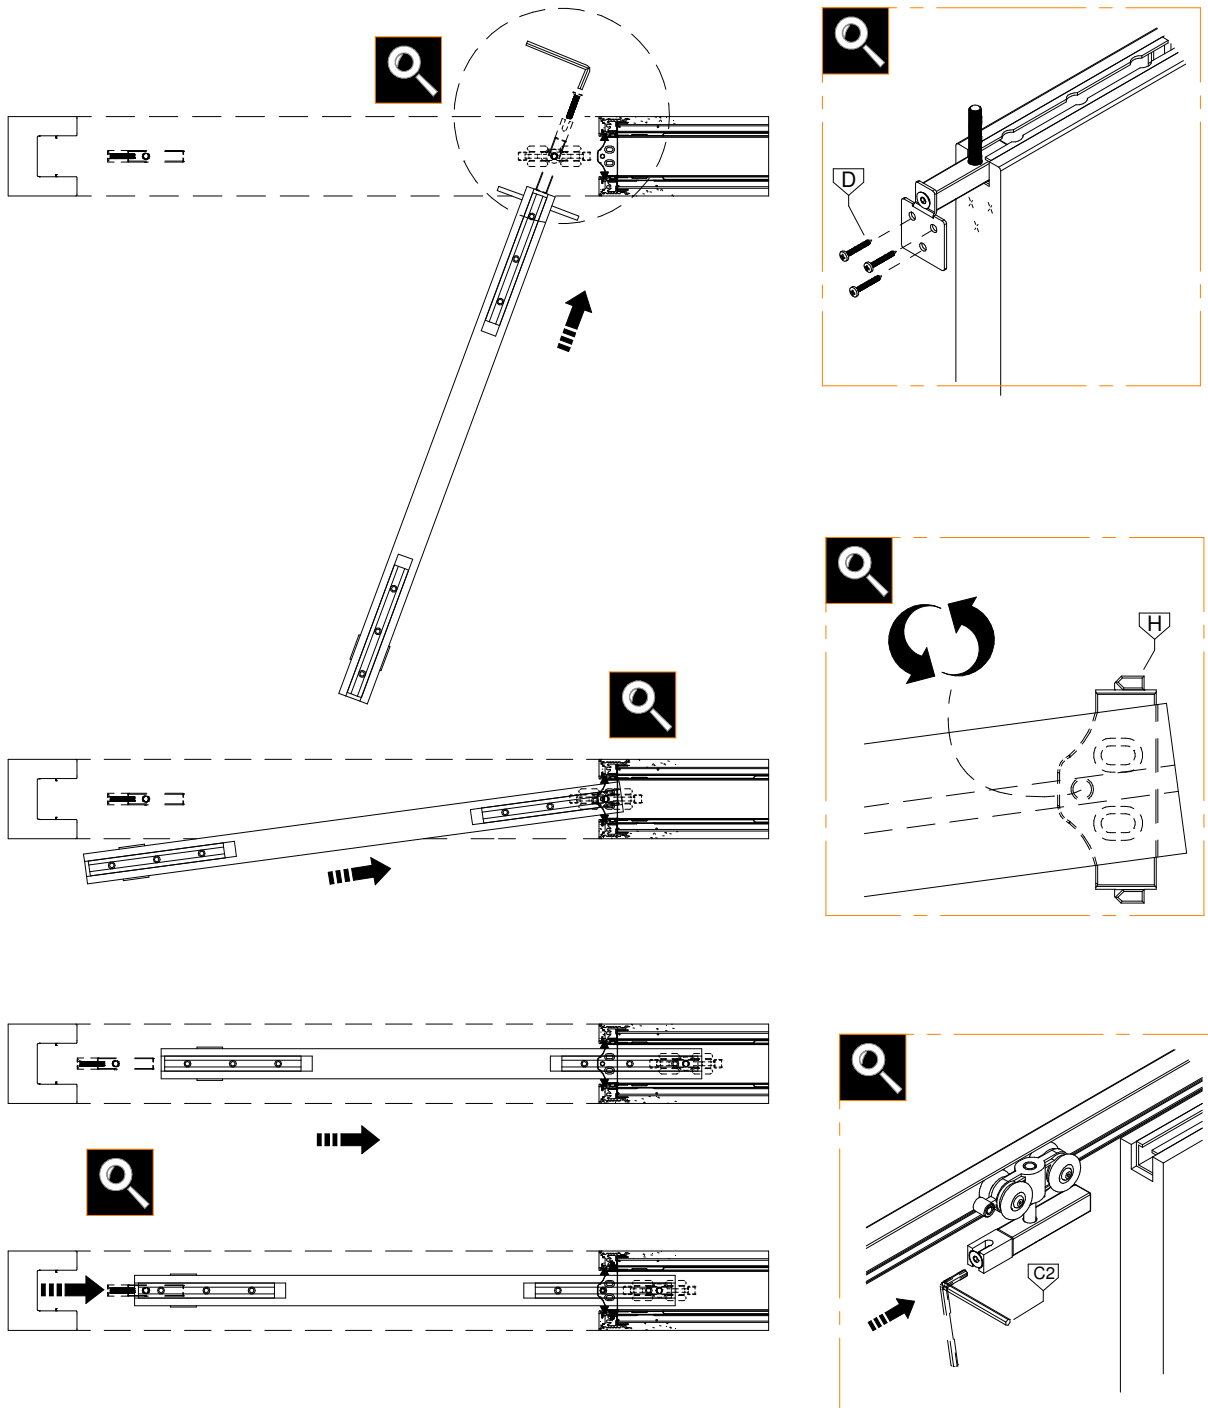

3.3

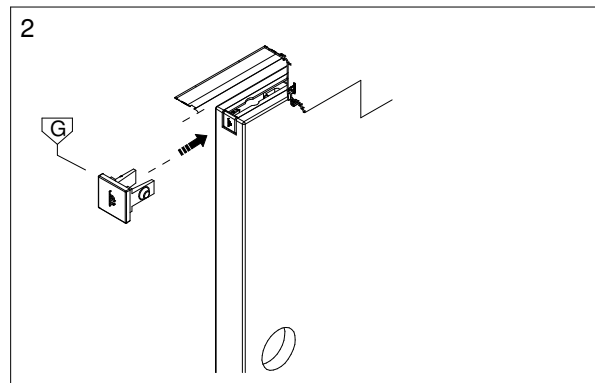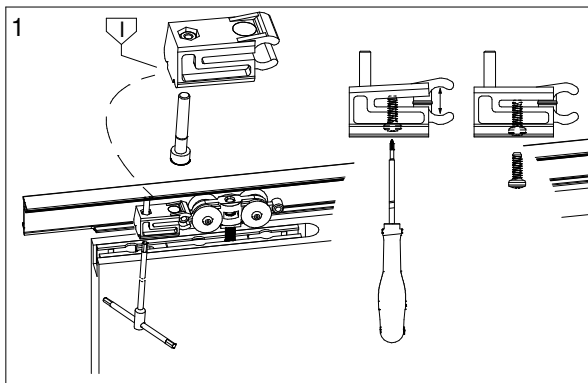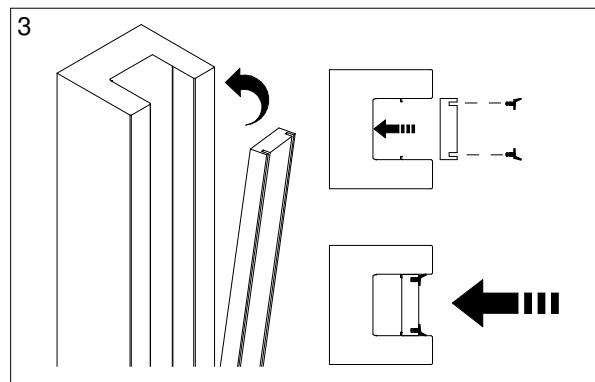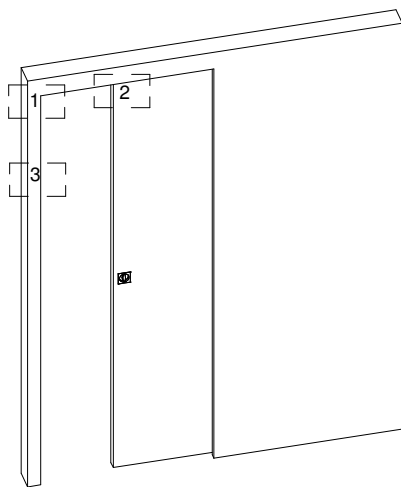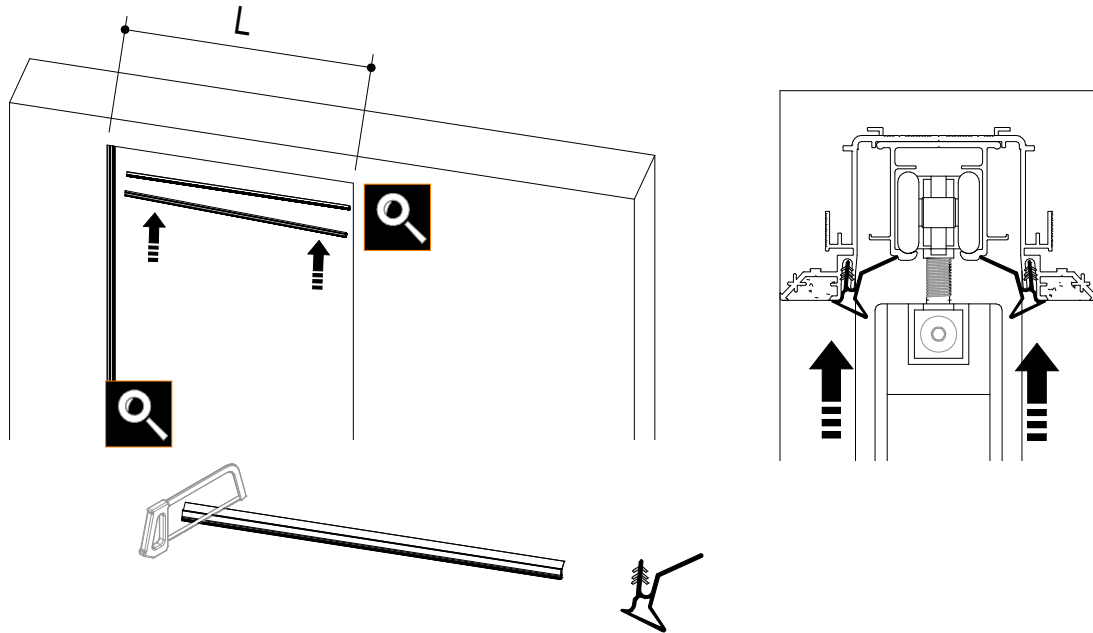

Subject to misprints, errors and technical modifications.  
All dimensions are in mm

# Ermetika®

DESIGN PASSAGES



T. +39 (0)883535781



info@ermetika.it



www.ermetika.it



<https://www.youtube.com/c/ermetikasrl>